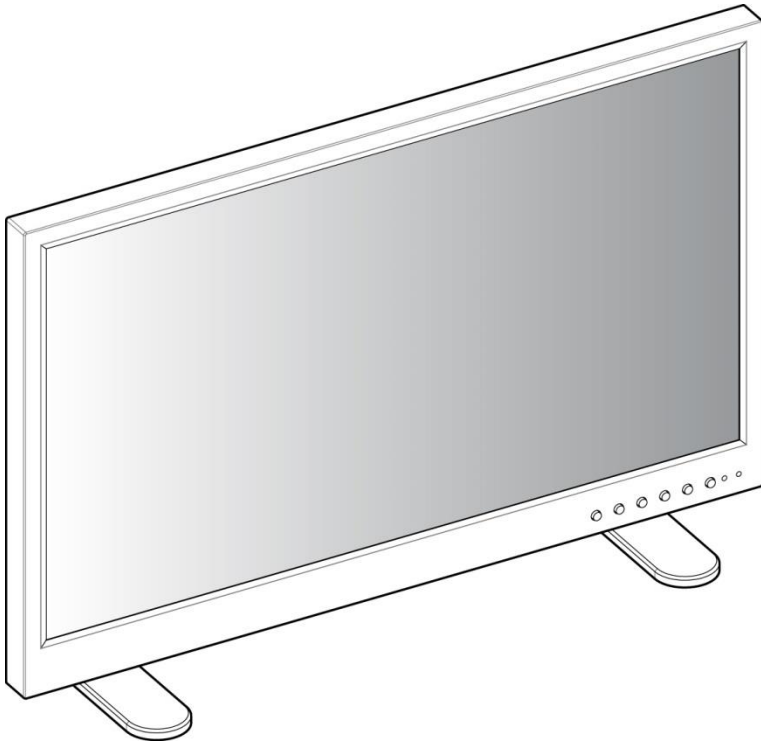 


**GB** Installation and Operating Instructions

## TFT LCD MONITOR

**VMC-27LEDM**  
**VMC-32LEDM**



**TABLE OF CONTENTS**

No	ITEM	Page
1	SAFETY INSTRUCTION	3
	- WARNING	
	- CAUTION	
2	FCC STATEMENT	7
3	INSTALLATION	8
	- PARTS	
	- HOW TO INSTALL	
4	OSD MENU SETTING	13
	- MENU STRUCTURE	
	- PICTURE MENU	
	- OPTION MENU	
	- INPUT SOURCE	
	- AUDIO VOLUME	
5	FEATURES	19
6	TROUBLESHOOTING	21

## 1.SAFETY INSTRUCTION

\* Follow this safety instruction to use the monitor properly and prevent the damage.

\* This safety instruction has "Warning" & "Caution" as below



Warning - If the user does not follow this instruction, it may cause the serious damage to the user.



Caution - If the user does not follow this instruction, it may cause the slight damage to the user or cause some damages to the monitor.

\* Keep this user's guide book for later use.



### Warning

Never remove the back cover and touch the inside of the monitor. If you need a service, please contact the service center.



 
Keep away the monitor from the direct sunlight and a heating appliance.



Never put objects of any kind into this product as they may result in a risk of fire or electric shock.



Connect the power cord to the wall outlet tightly. If the power cord or plug are defective and the wall outlet is not tight, please do not use them.

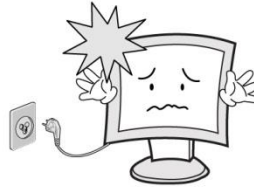



## Warning

Do not install this monitor on the outside and near water. It may cause damage to the product, electric shock and fire.



 
For cleaning do not use liquid cleaners. Never touch the power plug with wet-hands.




When lightning and thundering, unplug the monitor from the wall outlet and never touch it.



Unplug this product from the wall outlet, when it does not operate for a long time.

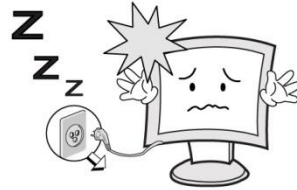

 When smoking and noising from the monitor, unplug the product from the wall outlet and contact a service center.

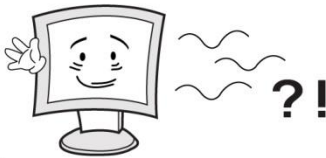

## Warning : How to fix

 
Do not open this product as it contains high voltage inside. It may create an electric shock.

If the user disassembles and remove the back cover, it does not make sure to make up for the damage and do a service and exchange the monitor.



## Cautions

Install this monitor some distance from the wall and do not install unless proper ventilation is provided.

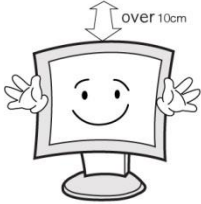

Place this product on a stable place. If not, it may fall, causing serious damages to the monitor and people.



The openings must not be blocked by curtain, rug or other similar surface.



 
When carrying this monitor, be careful not to damage the panel and drop it. It may cause some trouble.



Before carrying the monitor, turn it off and unplug the signal cables and the power cord from the wall outlet.




Take the power plug out from the wall outlet. Do not pull the cable. It may snap the inner-wires and cause overheating and fire.

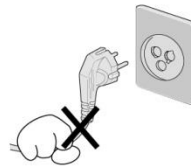

## ! Cautions

 
Install this monitor about 50cm far from the eyes and an angle of 0~15 degrees below eyes. Too close installation may cause having weak sight.

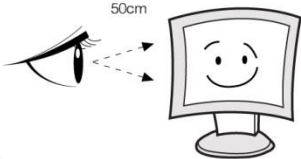

Do not press the LCD panel with hands or the sharpened material hardly.



 For cleaning, unplug the monitor from the wall outlet. Do not use the liquid cloth. Use the soft cloth.

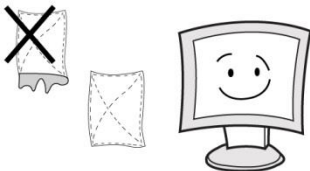

Do not use the chemical liquid for cleaning. It may cause fading and breakage.



**WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR WATER.**

### Instructions for Disposal of Electrical and Electronic Equipment in Private Households



**Disposal of used Electrical and Electronic Equipment  
(Applicable in the European Union and other European countries with garbage separate disposal and collection methods)**

This symbol on the product, or in the related documents in the package, indicates that this product shall not be treated as normal household waste. Instead, it should be taken to a proper applicable collection point or depot for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent possible negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city authority, your household waste disposal service or the place where you purchased the product.

## 2. FCC RF INTERFERENCE STATEMENT

### NOTE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technician for help.
- Only shielded interface cable should be used.

 
Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment.

### DOC COMPLIANCE NOTICE

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the radio interference regulation of Canadian Department of communications.

### 3. INSTALLATION


#### PARTS

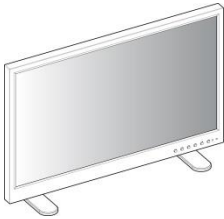


LCD Monitor



 
User Manual

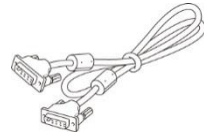

VGA Cable

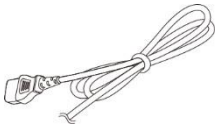 


Power Cable

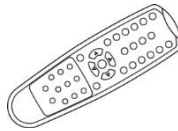 

Remote Controller



 Battery

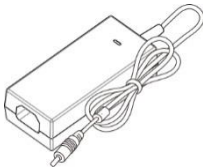

Adapter  
(Only VMC-27LEDM)



## HOW TO INSTALL

### 1) KEY BUTTON



### SHORT KEY FUNCTION

OSD Key	Function
MENU	Activate the menu function / Exit from the menu
SOURCE / ▼	Input source menu / Source selection(move down from OSD menu)
AUTO / ▲	Auto-fit screen with PC-RGB input / move up from OSD menu
◀(VOL)	Decrease the level of volume and move the previous menu
(VOL)▶	Increase the level of volume and select the OSD menu
⏻	Power On / Off
LED	Red : Power Off state Green : Power On and available input signal state Orange : When DPMS "ON" state, no input signal
▲+◀	Press "▲ , ◀" Key 10 seconds simultaneously to lock / unlock OSD Key

## 2) CONNECTION

### <VMC-27LEDM>



① **HDMI 1**

HDMI signal 1 input

② **HDMI 2**

HDMI signal 2 input

③ **VGA**

VGA (PC RGB) signal input

④ **AUDIO (PC)**

Stereo audio input for VGA

⑤ **For FW Update**

⑥ **DC12V**

DC adapter input

⑦ **AUDIO(VIDEO-1)**

Stereo audio input for VIDEO-1

⑧ **AUDIO(VIDEO-2)**

Stereo audio input for VIDEO-2

⑨ **VIDEO-1 IN/OUT**

 
VIDEO-1 signal input/looping out

⑩ **VIDEO-2 IN/OUT**

VIDEO-2 signal input/looping out

## 2) CONNECTION

### <VMC-32LEDM>

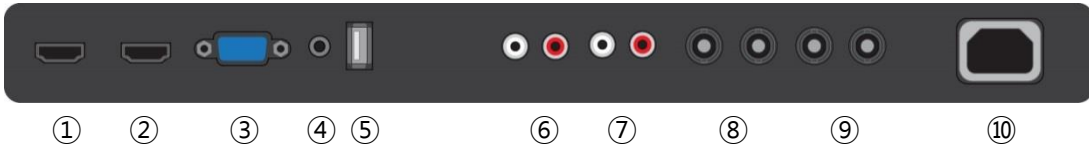

**① HDMI 1**

HDMI signal 1 input

**② HDMI 2**

HDMI signal 2 input

**③ VGA**

VGA (PC RGB) signal input

**④ AUDIO (PC)**

Stereo audio input for VGA

**⑤ For FW Update**

**⑥ AUDIO(VIDEO-1)**

Stereo audio input for VIDEO-1

**⑦ AUDIO(VIDEO-2)**

Stereo audio input for VIDEO-2

**⑧ VIDEO-1 IN/OUT**

VIDEO-1 signal input/looping out

 
**⑨ VIDEO-2 IN/OUT**

VIDEO-2 signal input/looping out

**⑩ AC POWER**

AC100~240V input

## 2) REMOTE CONTROLLER

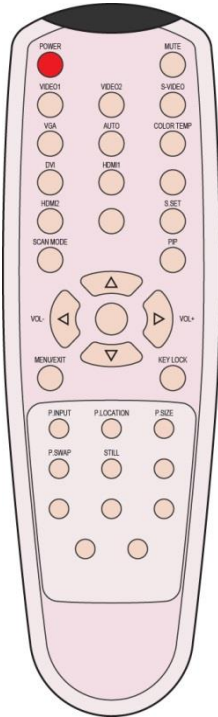

### ■ MODE SELECT MENU

- VIDEO1 : Select VIDEO1 mode
- VIDEO2 : Select VIDEO2 mode
- HDMI1 : Select HDMI1 mode
- HDMI2 : Select HDMI2 mode
- VGA (RGB) : Select VGA mode


 
### ■ OSD CONTROL MENU

- POWER : Turn ON / OFF the monitor
- MUTE : Turn ON / OFF the sound
- AUTO : Auto adjust position of the screen (in VGA mode)
- COLOR TEMPERATURE : Select color temperature of the screen
- SCAN MODE : Select the scan mode of the screen
- VOL- / VOL+ : Increase / Decrease the volume level
- MENU / EXIT : Activate and exit the OSD menu
- KEY LOCK : Locking the button (Prevent operation)

## 4. OSD MENU SETTING

### MENU STRUCTURE

When user presses the menu key, the first "PICTURE" menu is displayed. Select by "◀" key then three types of menu functions are shown as below.

-  PICTURE : Menu related to PICTURE Function
-  OPTION : Other OSD Menu Status Control and Firmware Update

If press "▲, ▼" key, then select sub title in functions.

### PICTURE MENU




The PICTURE Menu can be selected from the following 7 modes by pressing the ▲ or ▼ key.

Picture Mode	Adjust sate of the picture
Color Temperature	Change color according to the color temperature
Aspect Ratio	Change the aspect ratio
Noise Reduction	Adjust noise attenuation of input signal
Screen	Adjust the PC-RGB input signal to fit the screen
Color Range	Setting the Color Expression Range

## 1) Picture Mode

 Picture Mode can select 4 modes as Mild, Dynamic, Standard and User as shown in the figure below. Press the "◀, ▶" key to change the mode.

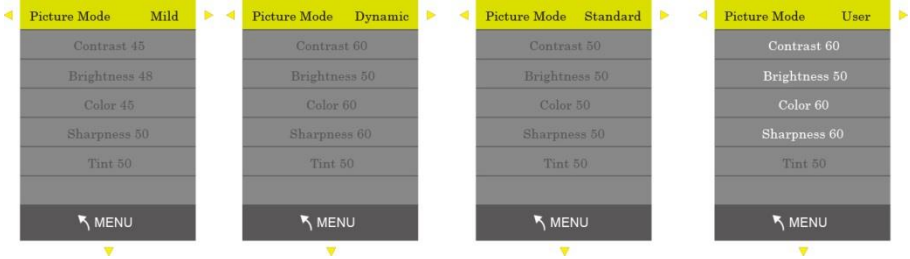

Three of the four modes except for User mode are shipped with fixed values at the time of shipment from the factory.

User mode can be set with "◀, ▶" keys by selecting each item below with "▲, ▼" key only in the User mode.

Contrast	Adjust difference in the color and brightness
Brightness	Adjust the dark and light
Color	Adjust for desired color intensity
Sharpness	Adjust for best clarity of outline detail
Tint	Adjust for natural flesh tones

## 2) Color Temperature

Color Temperature can select 4 modes as Cool, Medium, Warm and User as shown in the figure below.



Three modes except User mode are factory shipped with factory default values, and each color item (RED, GREEN, BLUE) is selected with the "▲, ▼" keys in the User mode only. User settings are available.

 
### 3) Aspect Ratio

Aspect Ratio allows user to select the each aspect ratio as shown in the figure below. (However, activated list is according to the input port and the input resolution.)



### 4) Noise Reduction

Noise Reduction can select 5 modes as Off, Low, Middle, High, Default as shown in the figure below.

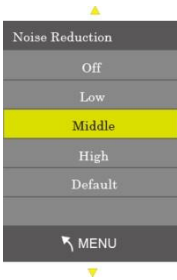

### 5) Screen

Screen enables to set the active area of the display when using PC-RGB input port.

 


Auto Adjust is an item to be set automatically, and the input signal should be operated in the signal state where the Outline has a lot of white color.

## 6) Color Range

Color Range sets the range of color expressions on the display.  
 (Press the "▶ SELECT" key to select either "0~255", "16~235")

### OPTION MENU

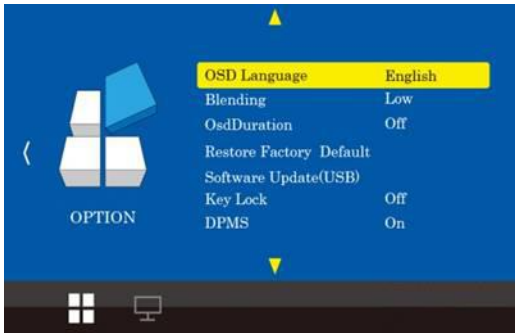


The Option Menu can be selected from the following 6 modes by pressing the ▲ or ▼ key.

OSD Language	Selectable OSD Menu Language
Blending	Adjust blending for OSD Menu and Main window
OSD Duration	Setting Duration time of OSD Menu
Restore Factory Default	
Software Update(USB)	
Key Lock	Locking the button(prevent operation)
DPMS	When input signal is the no signal, DPMS "on" change the power saving mode.



## 1) OSD Language

 As shown in the figure below, OSD Language can be selected by "▲, ▼" key.

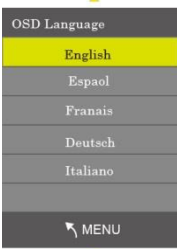

## 2) Blending

 
OSD Menu Blending can select 4 modes as Off, Low, Middle, High by pressing the "▶ SELECT" key.

## 3) OsdDuration

OSD menu Duration can select 4 modes as 5, 10, 15Sec and Off by pressing the "▶ SELECT" key.


## 4) Restore Factory Default

Restore factory default can be selected by pressing the "▶ SELECT" key. Select Yes or No by the "◀, ▶" key.

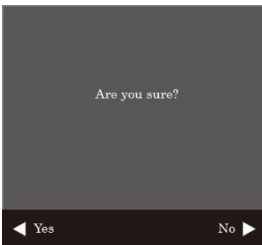

## 5) Software Update(USB)

 Software update default can be selected by pressing the "Menu" key. Select Yes or No by the "◀, ▶" key.

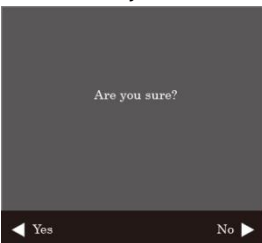

## 6) Key Lock

Key lock default can be selected by pressing the "▶ SELECT" key.



 
## 7) DPMS

The function can be activated(ON) or deactivated(OFF) with the button ▶.

## INPUT SOURCE

Input Source can be selected from the following four input modes by using the ▲ and ▼ keys when the window as shown below is displayed by pressing the "SOURCE / ▼" key in the Main window.

(Input Source can be selected by ▲ and ▼ key when window shown as below. To be in this menu, pressing the "SOURCE" / ▼" key in the Main window.)

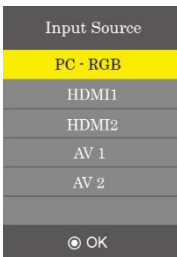

## AUDIO VOLUME

Audio Volume can be increased or decreased by pressing "VOL- / ◀", "VOL + / ▶" Key.



## 5. FEATURE

		<b>VMC-27LEDM</b>	<b>VMC-32LEDM</b>
Display	Screen Size	27.0 inches	31.55 inches
	Resolution	1920*1080	1920*1080
	Pixel Pitch	0.311*0.311 mm	0.364*0.364 mm
	Brightness	250 cd/m <sup>2</sup>	400 cd/m <sup>2</sup>
	Contrast Ratio	1000:1	1300:1
	Aspect Ratio	16:9	16:9
	Viewing Angle (H/V)	178/178 degrees	178/178 degrees
	Display Color	16.7 million	16.7 million
	Response Time	8 ms	8 ms
	Video System	NTSC/PAL	NTSC/PAL
	Panel Life Time (hours)	30,000 hours	50,000 hours
Interface	Video In/Out (BNC Type)	2/2	2/2
	VGA In (15Pin D-Sub)	1	1
	HDMI In	2	2
	Audio In(RCA Type)	2	2
	PC Stereo In	1	1
Audio	Built in Speakers	Y (1W*2)	Y (7.5W*2)
Transmitter	Remote Control	Y	Y
Special Features	Filter Type	3D Comb filter	3D Comb filter
	Deinterlacing	Y	Y
	LCD Protection Glass	Option	Option
	Noise reduction	Y	Y
	Multi Lingual Language	Eng, Spa, Fre, Ger, Ita	Eng, Spa, Fre, Ger, Ita

## 5. FEATURE

Dimension	Outline Dimension (w Stand)	25.20*16.89*6.30" 640*429*160 mm	28.82*19.14*6.30" 732*486.3*160 mm
Cabinet	Cabinet color/Base Stand Cabinet Material	Black/Desktop Stand Electro-Galvanized Steel	Black/Desktop Stand Electro-Galvanized Steel
Power	Electrical Ratings	DC 12V, 5A	AC 100~240V (50/60Hz)
Circumstance	Operating Temperature	0~40 celsius	0~40 celsius
	Storage Temperature	-20~60 cesius	-20~60 cesius
Mounts	VESA Mounts Size	100*100 / 200*100 mm	200*200 mm
	Ceiling Mount	CMK-01	CMK-01 with FMA-01
	Wall	WB-31, 2642	WB-2642

## 6. TROUBLESHOOTING

- \* When the following troubles are occurred, follow the trouble shooting.  
Before contacting service center.

Troubleshooting	Troubleshooting Tip
The screen doesn't show up	<ol style="list-style-type: none"> <li>1. Make sure if the power supply is connected property</li> <li>2. Turn on the power.</li> <li>3. Select the input signal right for the connected port.</li> </ol>
The screen is too light or to dark	Control the BRIGHTNESS
The screen size is not fit for the PC signal	Press the AUTO key among keys in the front. (It is used only in the PC signal)
The screen color shows strange in the PC signal	In the FUNCTION menu of OSD menu, perform the AUTOADJUST.
The key pad does not work	Press ▲ and ◀ button on the key pad for 10 seconds.

**MEMO**

**MEMO**



eneo® is a registered trademark of VIDEOR E. Hartig GmbH  
Exclusive distribution through specialised trade channels only.

VIDEOR E. Hartig GmbH  
Carl-Zeiss-Straße 8 · 63322 Rödermark, Germany  
Tel. +49 (0) 6074 / 888-0 · Fax +49 (0) 6074 / 888-100

[www.videor.com](http://www.videor.com)  
[www.eneo-security.com](http://www.eneo-security.com)

Technical changes reserved.  
© Copyright by VIDEOR E. Hartig GmbH 01/2018

