 
 


GB Installation and Operating Instructions

17.0"/19.0" TFT LCD MONITOR

VMC-17LCDOPC4
VMC-19LEDOPC4

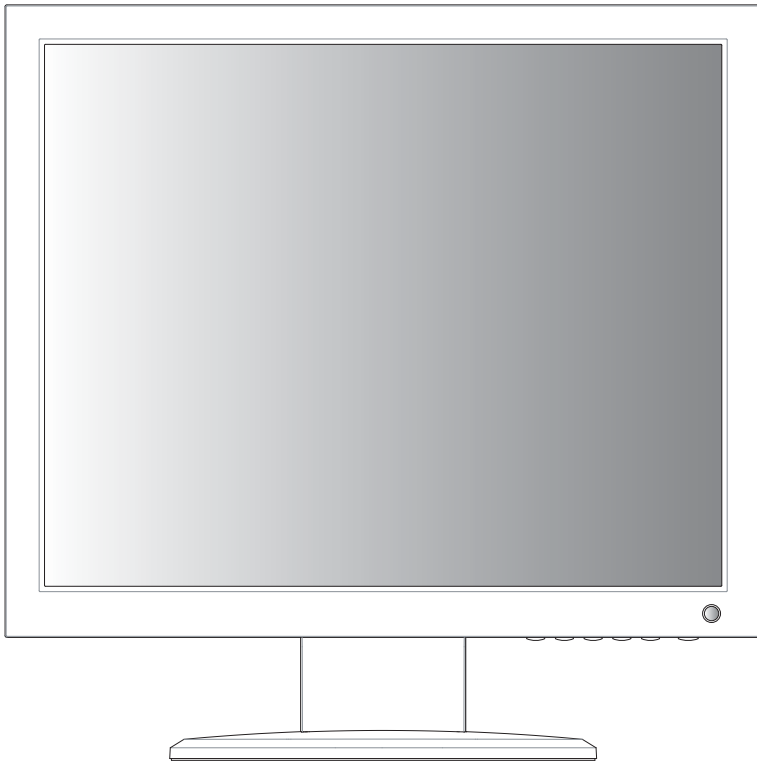

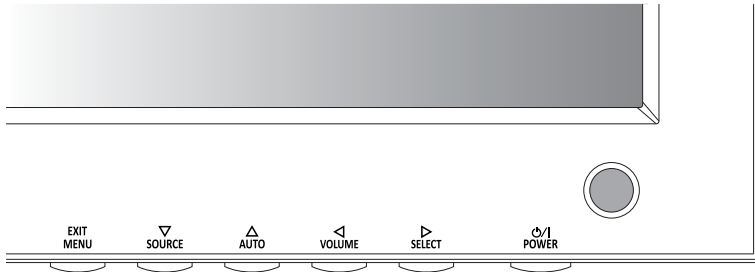


SHORT KEY FUNCTION

OSD Key	Function
EXIT MENU	Activates and exit the OSD
SOURCE	Select input source, and select the OSD menu
AUTO	Move the OSD menu and auto adjustment of RGB source
VOLUME	Decrease the level of volume and move the previous menu
SELECT	Increase the level of volume and select the OSD menu
POWER	Turns the power ON or OFF. There will be a few seconds delay before the display appears. The power LED (next to the power switch) lights with green when the power is turned ON. The power is turned off by pressing the power switch again and the power LED goes red.

17 inches



 19 inches



- | | |
|--|---|
| <p>1 HDMI
<i>HDMI signal input</i></p> <p>3 VIDEO-1 IN / OUT
<i>VIDEO-1 signal input / looping out</i></p> <p>5 AUDIO (VIDEO)
<i>Stereo audio input for VIDEO or S-VIDEO</i></p> <p>7 AUDIO (PC)
<i>Stereo audio input for VGA</i></p> | <p>2 VGA
<i>VGA (PC RGB) signal input</i></p> <p>4 VIDEO-2 IN / OUT
<i>VIDEO-2 signal input / looping out</i></p> <p>6 S-VIDEO
<i>S-VIDEO signal input</i></p> <p>8 DC12V
<i>DC adapter input</i></p> |
|--|---|


INPUT SELECT

AV1
AV2
SVIDEO
HDMI
PC

1. Press the **SOURCE** button and then ▲ / ▼ Button to move the source
2. Press the ► button to select the source
3. Press the **MENU/EXIT** Button to exit the INPUT menu.

Inputs can be set to AV1, AV2, S-VIDEO, HDMI and PC mode.

 
VOLUME MENU



Press the ◀ / ▶ button for adjusting the volume up and down.

AV1/2, S-VIDEO & HDMI Mode

 PC Mode only

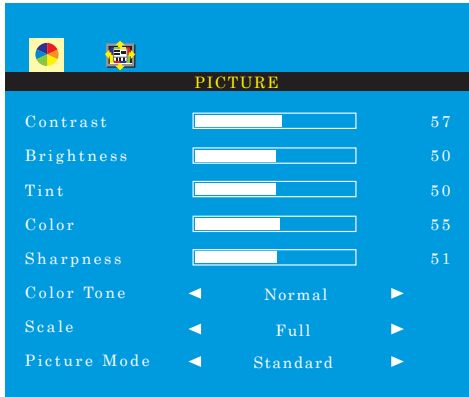


1. Press the MENU/EXIT Button and then ◀ / ▶ Button to select the PICTURE menu.
2. Press the ▲ or ▼ Button and then button to select the Button to select the adjustment item you need.
3. Press the ◀ or ▶ Button to active the item.

*Ex) if you select the **BRIGHTNESS**, then the below picture appears on the bottom screen.*




 4. 'Auto' function is adjusting the location of screen by receiving the sync signal from PC.
Ex) Resolution change
5. 'Color Auto' is adjusting the optimum color coordination automatically.
6. Press the MENU/EXIT button to move to the previous menu.

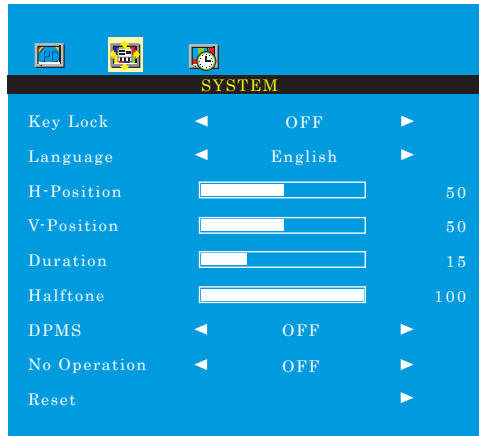

1. Press the MENU/EXIT Button and then ◀ / ▶ Button to select the SYSTEM menu.
2. Press the ▲ or ▼ Button and then button to select the Button to select the adjustment item you need.
3. Press the ◀ or ▶ Button to active the item.
4. 'Key Lock' function is adjust the button lock option.
 - Release the lock - Press KEY LOCK button on the remote controller.
 - Press Δ AUTO & ∇ VOLUME button on the key pad.
5. 'Duration' function is adjust the time to display OSD menu.
6. 'Halftone' function is adjust the transparency of the OSD menu.
7. 'DPMS' function is adjust the time to turn power off during no input signal.
8. 'No Operation' function is adjust the time to turn power off during no input key button.

 PC Mode only

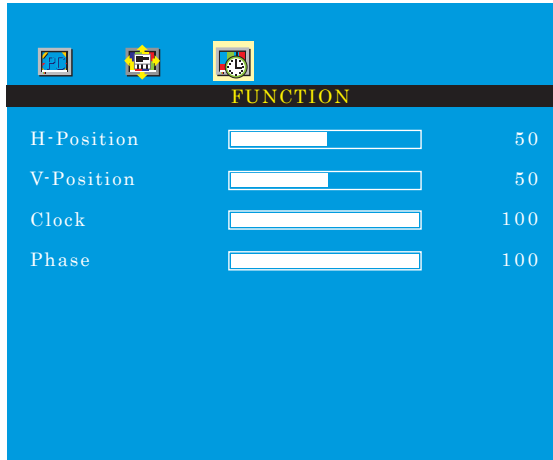

1. Press the MENU/EXIT Button and then ◀ / ▶ Button to select the FUNCTION menu.
2. Press the ▲ or ▼ Button and then button to select the Button to select the adjustment item you need.
3. Press the ◀ or ▶ Button to active the item.
4. Press the MENU/EXIT button to move to the previous menu.



eneo® is a registered trademark of Videor E. Hartig GmbH
Exclusive distribution through specialised trade channels only.

Videor E. Hartig GmbH
Carl-Zeiss-Straße 8 • 63322 Rödermark, Germany
Tel. +49 (0) 6074 / 888-0 • Fax +49 (0) 6074 / 888-100

www.videor.com
www.eneo-security.com

Technical changes reserved.
© Copyright by Videor E. Hartig GmbH 03/2013